



KONICA MINOLTA

柯尼卡美能達『八達通』自助打印服務使用指示

Konica Minolta Octopus Self Print Service Operation Instruction

1 電腦打印文件 Making Print

- 選擇本打印機 Select Printer Konica Minolta 751 PCL
- 按【列印】press【Print】
- 輸入【機密列印 ID】和【密碼】Input【Secure Print ID】and【Password】
- 按【確定】select【OK】

 
Secure Print	
Secure Print ID	Max. 16
Password	Max. 8

2

請插入八達通卡 Insert Octopus Card for Printing



2a. 於機身右邊插入八達通卡
Insert Octopus card

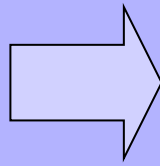


2b. 收費器會顯示八達通卡的剩餘數值
Octopus Processor will show the usable value

3

於影印機上 On Copier

 - 按 Press【User Box】
- 選 Touch【Use Document】
- 選 Touch【System User Box】
- 選 Touch【Secure Print User Box】再按 and touch【OK】
- 輸入 Input【Secure Print ID】再按 and touch【OK】
- 輸入 Input【Password】再按 and touch【OK】
- 選擇自己的打印文件 Select your print job
- 選 Touch【Print】
- 按影印鍵開始打印 Press Start to print

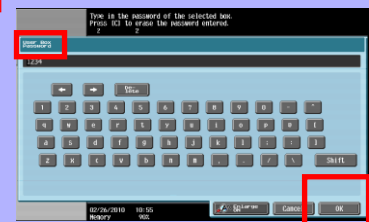


4

打印完畢後，請取回八達通卡 Remove Octopus card after printing



 4a. 按收費器上的藍色按鍵
Press blue button on Octopus processor

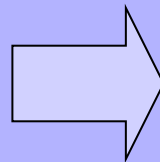

4b. 可以取回八達通卡
Remove Octopus card

*打印收費 Printing Charge: B/W 黑白 A4 每張 each HK \$0.3
A3 每張 each HK \$0.6