


Scan to External Memory Device (USB Drive) For Konica Minolta C364 / C454E Photocopier


(1) Operation Instruction

(i) Insert Octopus card to card reader (Scanning is free but an Octopus card is still required for scanning)


(ii) Connect an external USB memory device to the USB connector on the right hand side of this machine.

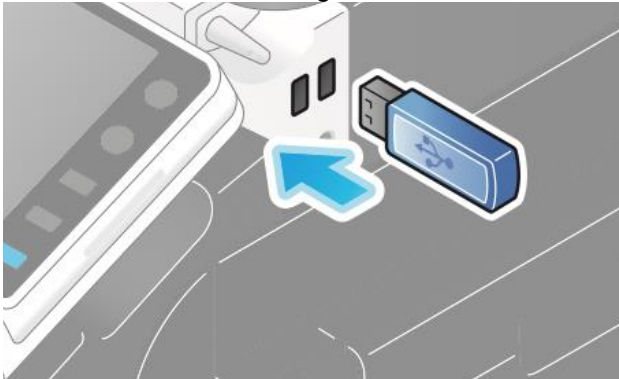


(iii) Wait for a few seconds and press [Save a document to External Memory] when the screen pops up.

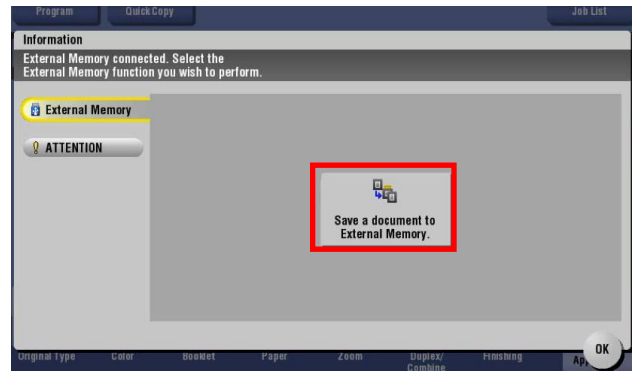


(iv) Change the Filename and setting (file type, resolution, etc) if necessary.

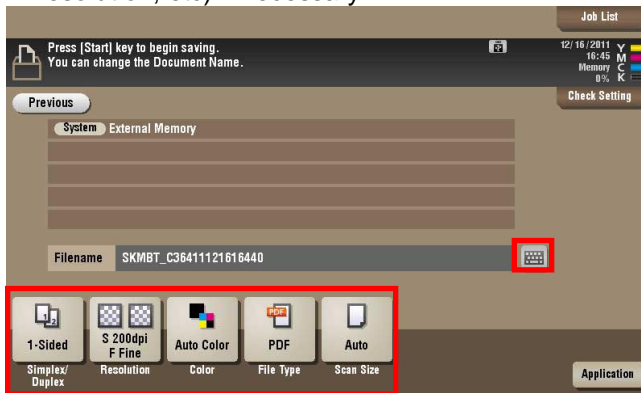

(v) The default is to scan each page to a separate file. To scan multiple pages to a single PDF file, select [Application].

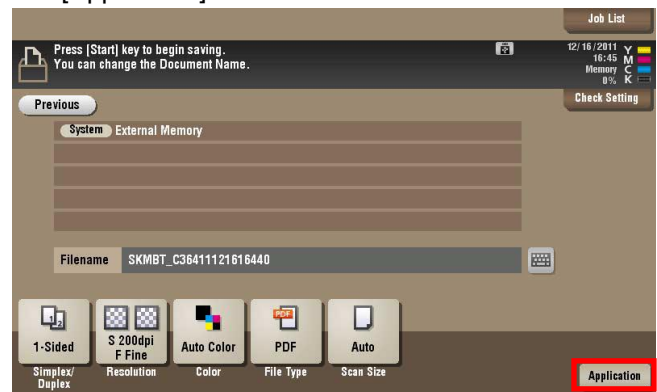

(vi) Select [Separate Scan] and [close].

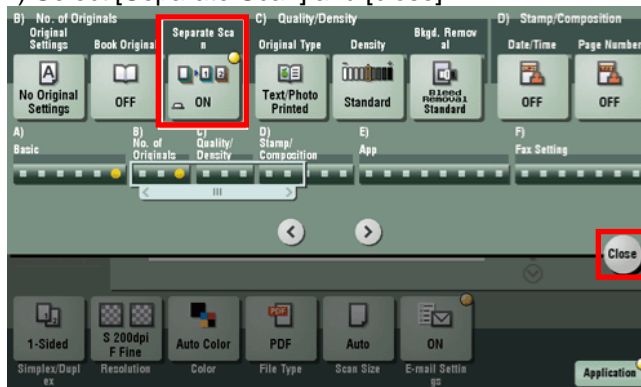

(vii) Press [Start] button to start scanning.



(viii) Remove your document, USB Drive and the Octopus card after scanning.

(2) What kinds of external memory devices can be used on this machine?

- USB flash memory supporting the USB (1.1/2.0) Interface in FAT32 format
- The recommended memory size is up to 2 gigabytes (this machine may not operate if the memory size exceeds 4 gigabytes)
- Password / securities function must be disabled
- Multiple-drives devices will not be recognized on this machine

(3) Reminder

- Do not remove the external memory device while a document is being saved
- File can be saved as PDF, TIFF, XPS and OpenXML(.pptx)
- The file path and file name cannot exceed 250 characters.