


# Colour Scan to Computer (Konica Minolta C364 / C454e Photocopier)

## Operation Instruction

(i) Insert Octopus card to card reader (Scanning is free but an Octopus card is still required for scanning)


(ii) Load the original

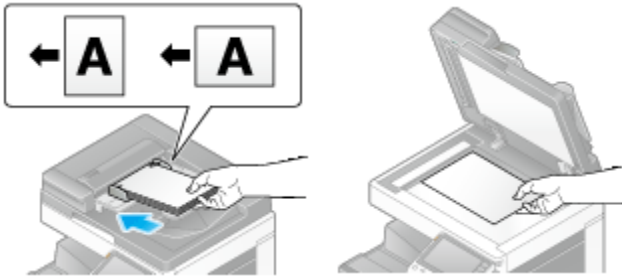

(iii) Press [Menu] key and then tap [Scan/Fax]



(iv) Specify the destination computer

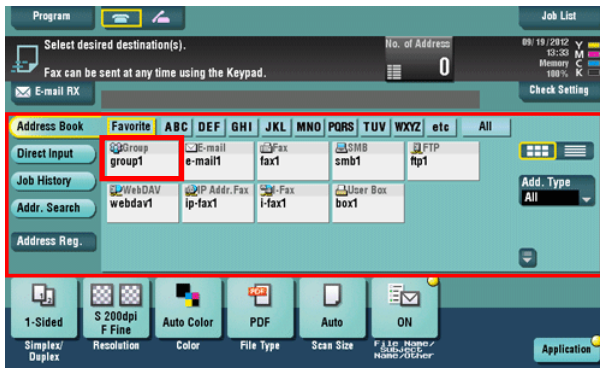

(v) Configure Scan option settings as necessary



(vi) Press the **Start** key to scan



(vii) After all originals are scanned, tap **[Finish]** and press the **Start** key

