




KONICA MINOLTA

## 柯尼卡美能達『八達通』自助影印服務使用指示 Konica Minolta Octopus Self Copy Service Operation

### 1 請先插入八達通卡 Insert Octopus Card for Copying




1a. 於機身右邊插入八達通卡  
Insert Octopus card

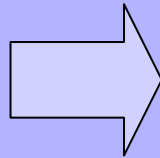

1b. 當收費器顯示八達通卡的剩餘數值後，便可開始影印。  
Octopus Processor will show the usable value

### 2 開始影印文件 Making Copy


- i. 打開影印機蓋 Open cover
- ii. 放入原稿 (如用入紙器原稿正面請向上放)  
Place Original (put the original face up at the feeder)
- iii. 選擇 A4 或 A3 紙張 Select A4 or A3 paper
- iv. 用數字鍵輸入影印數量 Input no. of copy
- v. 按影印鍵開始影印  
Press Start to copy

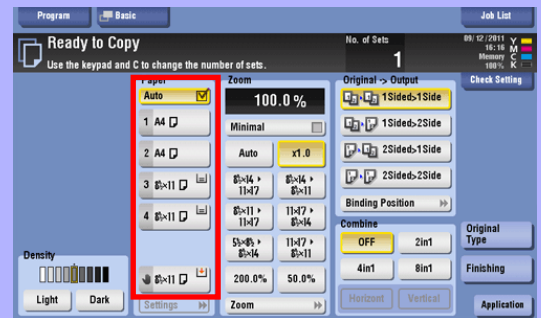

### 3 影印完畢後，請取回八達通卡 Remove Octopus card after copying



3a. 按收費器上的藍色按鈕  
Press blue button on Octopus processor

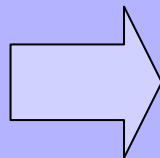

3b. 可以取回八達通卡  
Remove Octopus card

\*影印收費 Copying Charge: B/W 黑白 A4 每張 each HK \$0.3  
A3 每張 each HK \$0.6