



KONICA MINOLTA

## PC Print Service Operation

## 電腦打印服務操作

### Making Print

1. Select Konica Minolta Printer
2. Select [Print]
3. Input [secure print ID] and [Password] (Self-Assigned, then [OK])

Secure Print

Secure Print ID

Max. 16

Password

Max. 8

### 打印文件

1. 選擇Konica Minolta 打印機
2. 接〔打印〕
3. 輸入〔機密列印ID〕和〔密碼〕(自訂),再按〔確定〕

### Insert Octopus Card

4. Insert Octopus card
5. Octopus processor will show the usable value




### 插入八達通卡

4. 插入八達通卡
5. 八達通讀取器會顯示卡的餘數



### Retrieve the print job

6. Press [Menu]
7. Select [User Box] and [Secure Print]
8. Input [Secure print ID], [Password] and [OK]
9. Select job and press

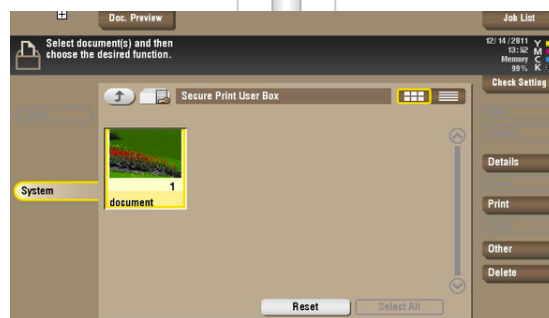

### 選擇打印工作

6. 接〔Menu〕
7. 按〔檔案箱〕,再按〔安全列印〕
8. 輸入機密列印ID和密碼, 再按〔OK〕
9. 選擇文件再按〔Start〕

### Remove Octopus Card

10. Press blue button on Octopus processor
11. Remove Octopus card



### 取回八達通卡

10. 按讀取器上的藍色按鍵
11. 取回八達通卡

