

# Scan to USB

1

2

3

富士施樂『八達通』自助影印服務使用指示 FUJI XEROX Octopus Self Copy Service Operation

#### 插入USB Insert USB to Printer



I. 在影印機左方插入USB Insert USB to the Left hand side of the Copier

#### 掃瞄設定 Scan Setting

- A. 設定掃瞄色彩 Select Scan Color
- B. 設定掃瞄頁數Select Scan page



II. 選取【掃瞄USB記憶體儲存】 Tap [Scan to USB]

Common Features	Scan	Scan
O Preview		
Color Scanning		Auto Detect
2 Sided Scanning		1 Sided
Resolution		200 dpi
Original Type		Text
Original Orientation		Upright
Original Size		Auto Detect
Mixed Size Originals		Off

#### 開始掃瞄並傳送文件 Start Scanning and send to USB



I. 按開始鍵進行掃瞄 Press Start to scan



IIa. 如果已掃瞄至最後一頁,可按【傳送】進行傳送
Press [Send (Last Original)] if the last original have been scan
IIb. 如果仍需要進行掃瞄,可按【有下一張原稿】繼續進行掃瞄
Press [Scan Next Original] to scan next copy

## 4

### 完成 Finish

完成傳送後,按【影印機主畫面頁】鍵,然後移除USB

Press [Service Home] button before ejecting the USB.

