


Wi-Fi Printing

For Android (4.4 or above)


 
富士施樂『八達通』自助影印服務使用指示
FUJI XEROX Octopus Self Copy Service Operation

1. Connect Mobile to Wi-Fi

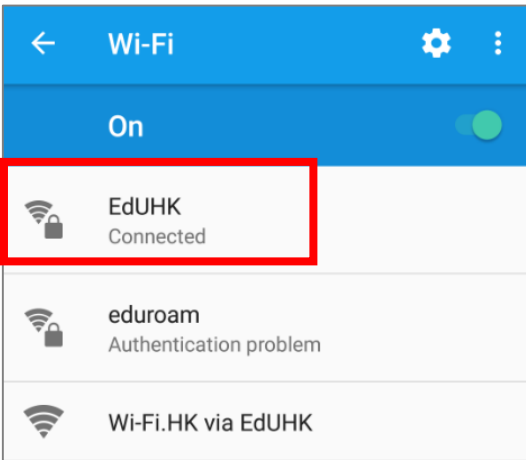



Must select [EdUHK]

2. Installation

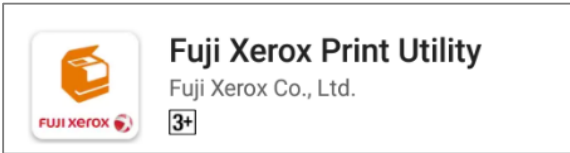

Install [Fuji Xerox Print Utility]
from Play Store

3. Add Printer

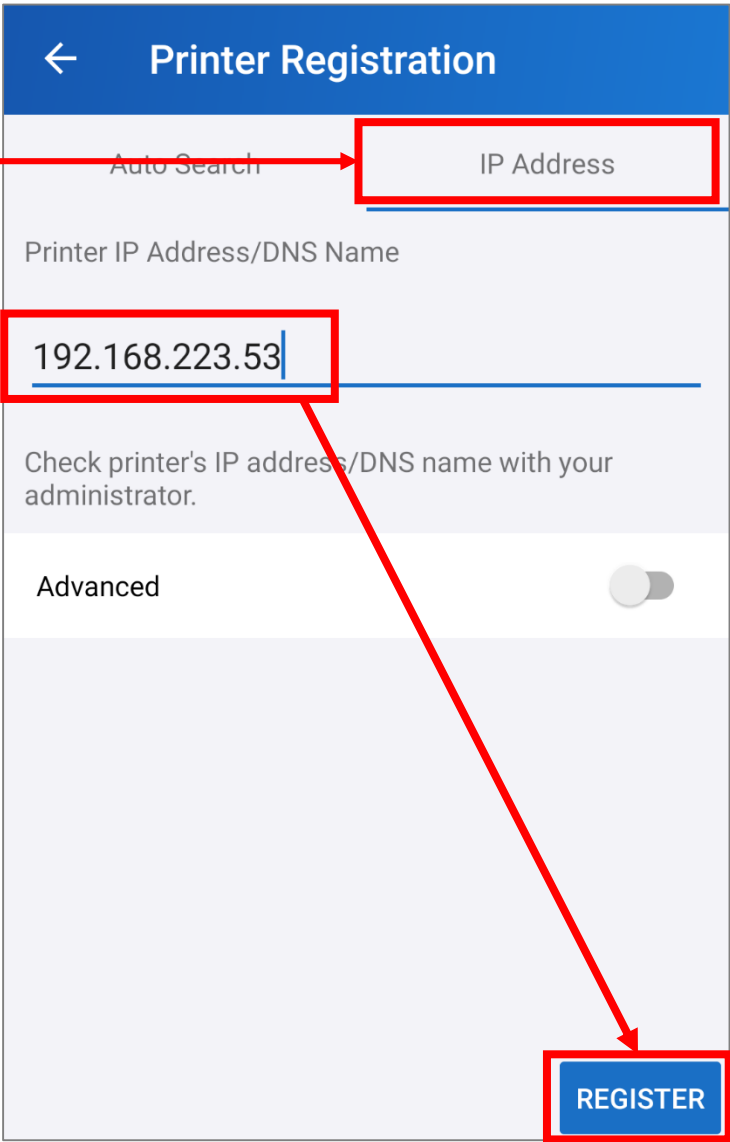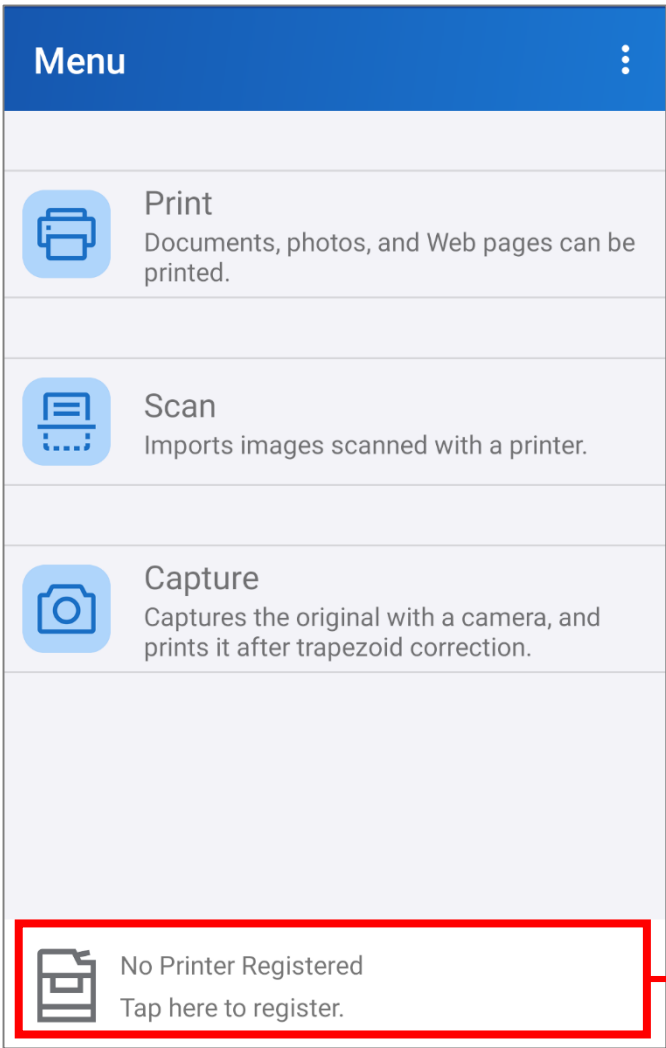

Please refer to the table below for all the IP addresses:


Machine No.	Floor	IP Address
	G/F	192.168.223.36
	1/F	192.168.223.53

Wi-Fi Printing


For Android (4.4 or above)

富士施樂『八達通』自助影印服務使用指示
FUJI XEROX Octopus Self Copy Service Operation


4. Printing

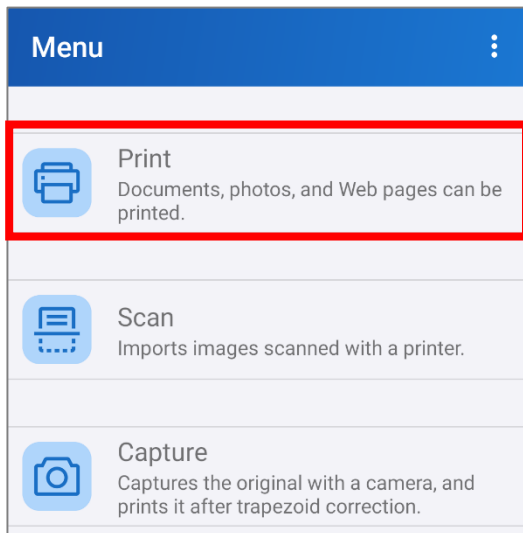


a. Tap [Print] in FUJI XEROX application

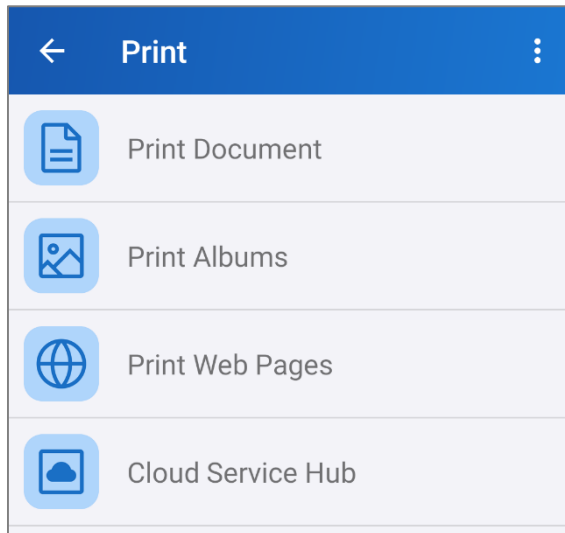


b. Tap desired file to print

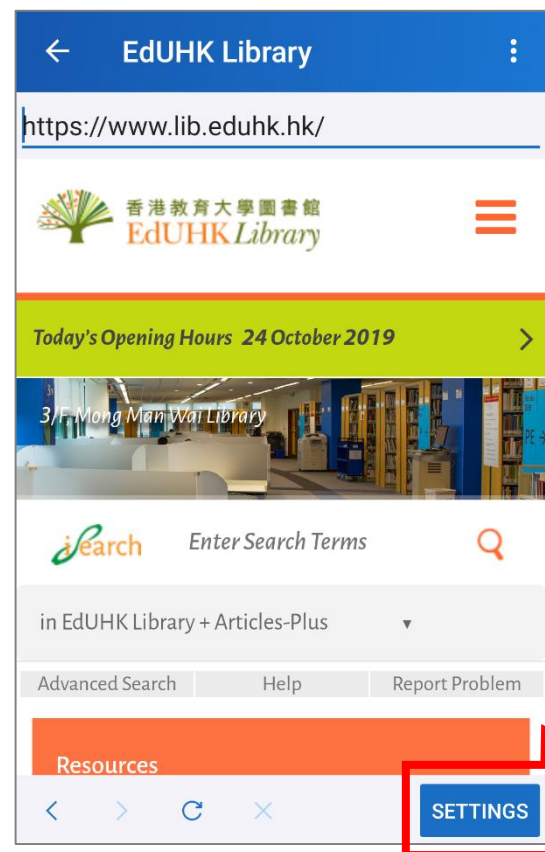


c. Change desired [Settings]

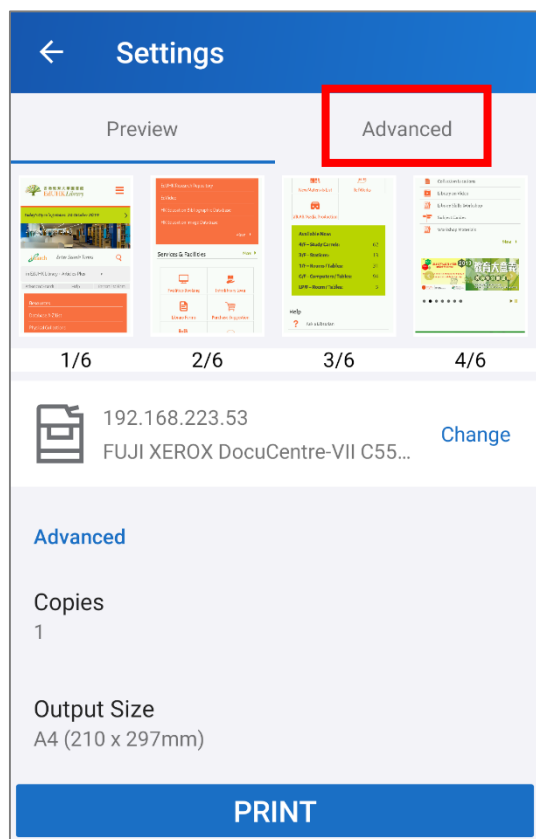

d. Tap [Advanced]

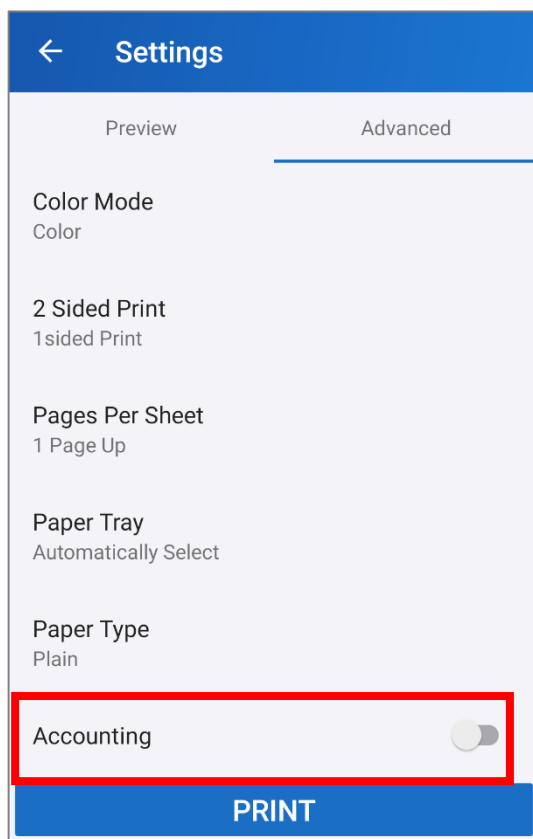

e. Tap [Accounting]

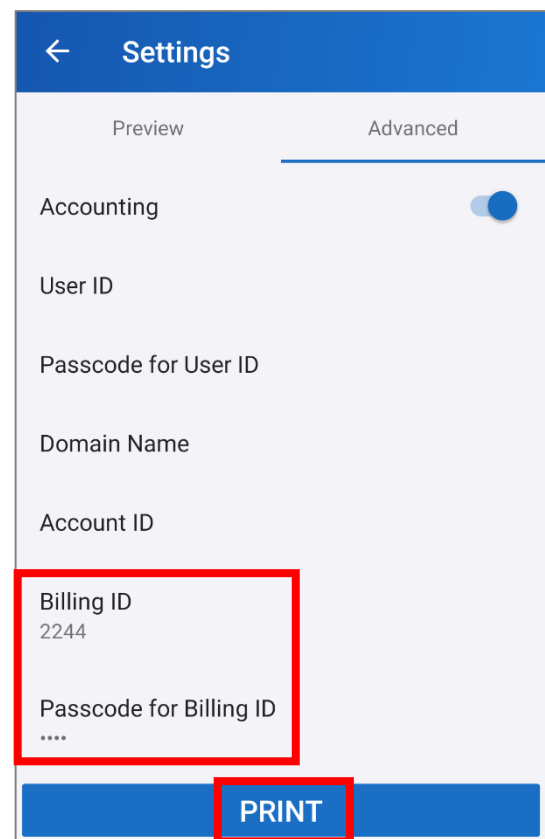

f. Set the Billing ID and Passcode and Tap [Print] to start the print


Other than using FUJI XEROX application, you can “Share” with FUJI XEROX for printing

Wi-Fi Printing


For Android (4.4 or above)

富士施樂『八達通』自助影印服務使用指示
FUJI XEROX Octopus Self Copy Service Operation


5. Insert Octopus Card

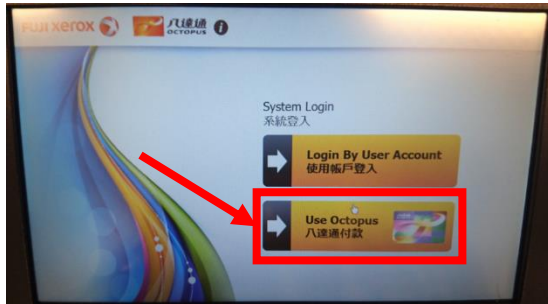

I. Select [Use Octopus] on Octopus Processor

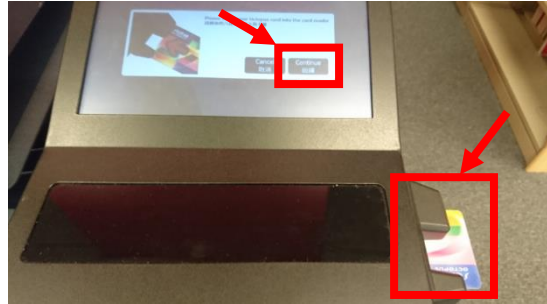


II. Insert Octopus card and click [Confirm] on Octopus Processor

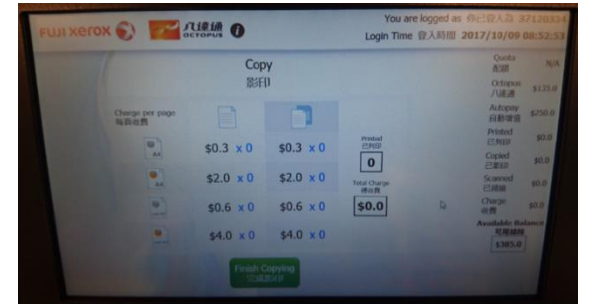


III. Octopus Processor will show the usable value


6. On Printer

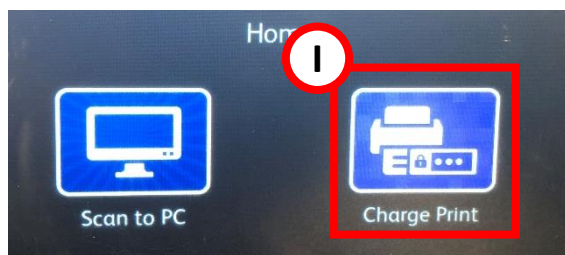


I. Tap [Charge Print] on the Menu of the Printer

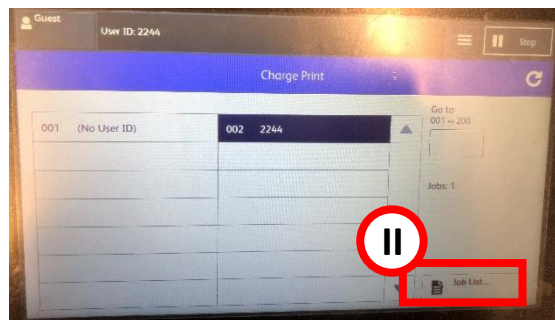


II. Select the Billing ID entered before and tap [Job List]

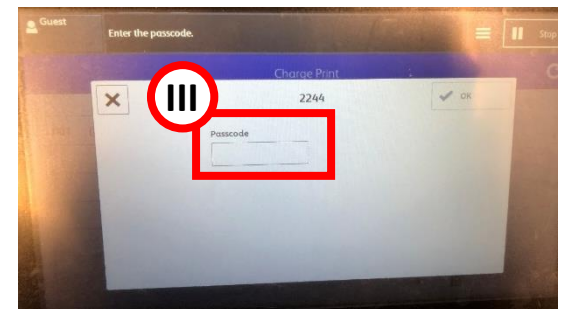

III. Input [Passcode]

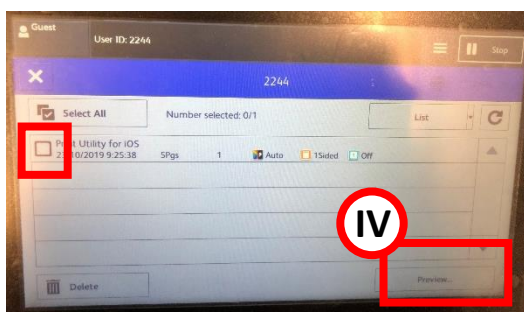


IV. Select your print job and tap [Preview]

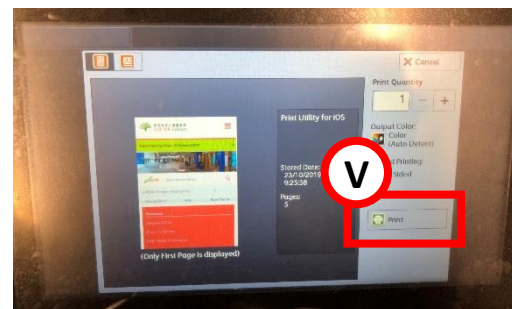


V. Tap [Print] to start printing

7. Remove Octopus card

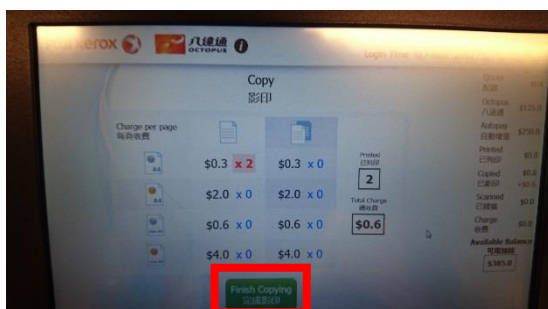

I. Select [Finish Copying] on Octopus Processor

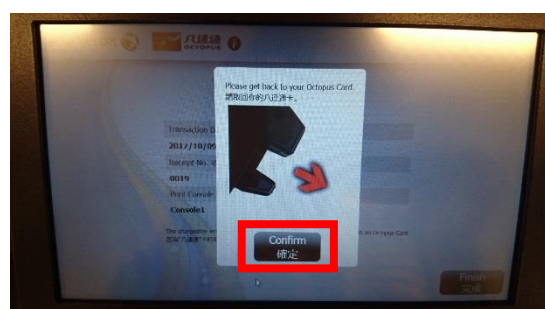

II. Select [Confirm] on Octopus Processor



III. Remove Octopus card