


# Wi-Fi Printing

For IOS (9.0 or above)

富士施樂『八達通』自助影印服務使用指示  
FUJI XEROX Octopus Self Copy Service Operation

## 1. Connect Mobile to Wi-Fi

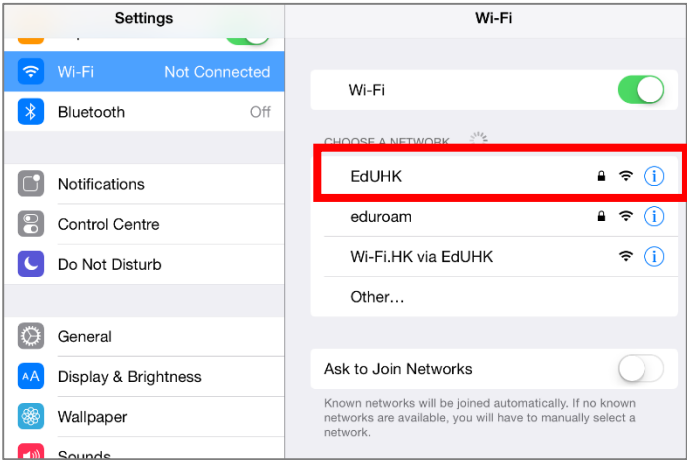



Must select [EdUHK]

## 2. Installation



Install [Fuji Xerox Print Utility]  
from App Store

## 3. Add Printer

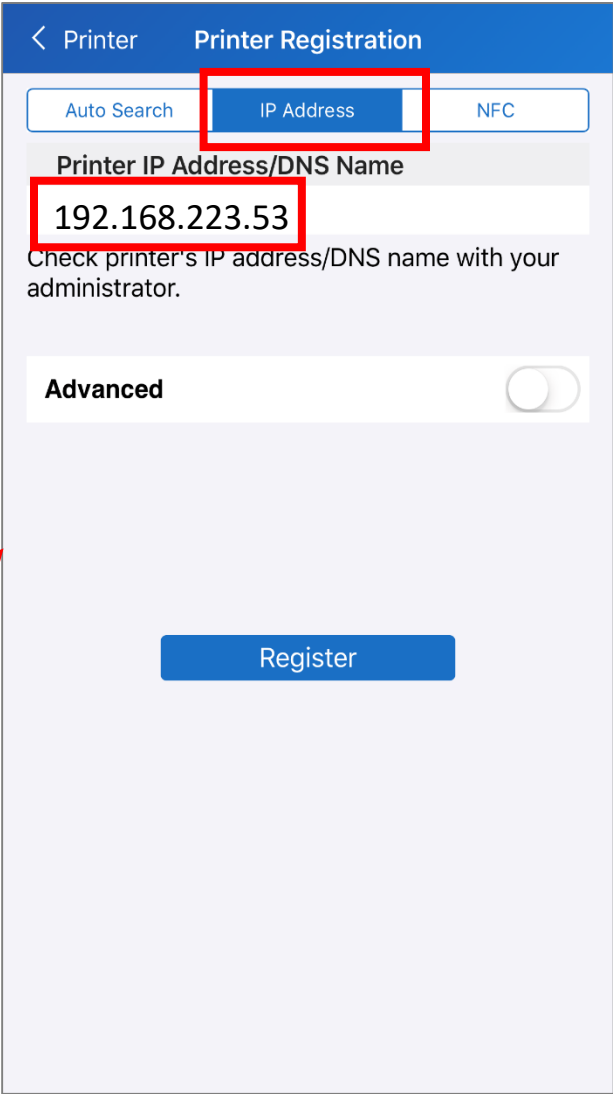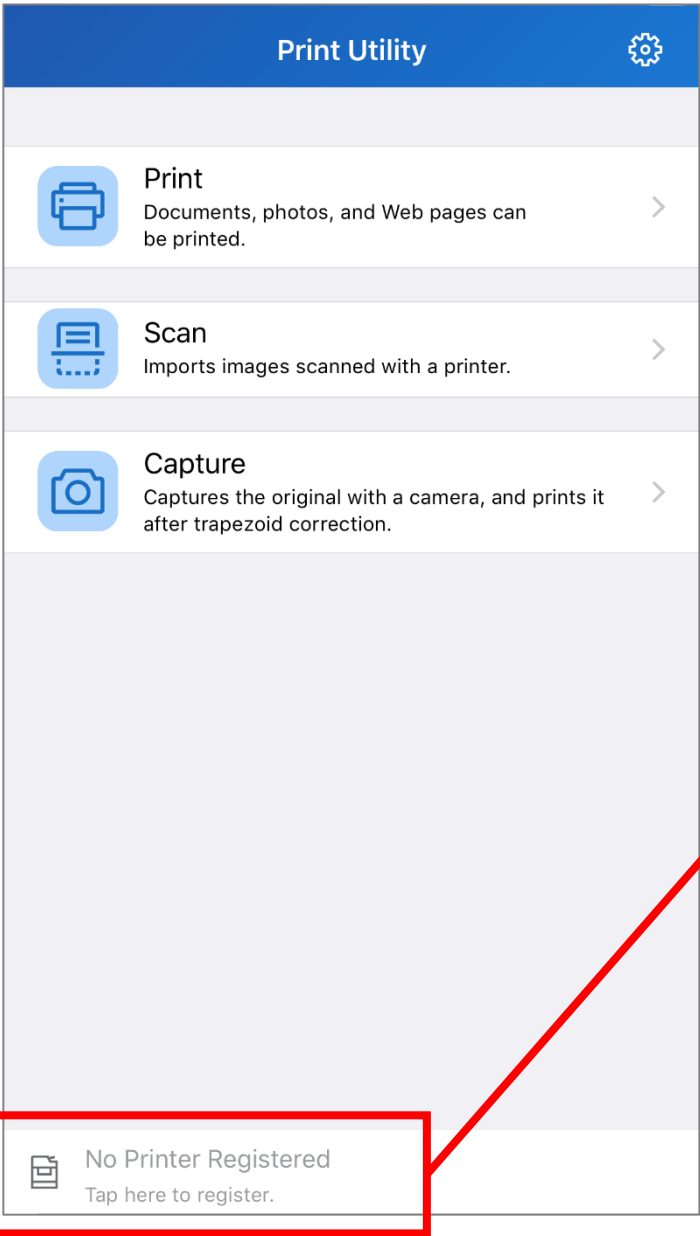

Please refer to the table below for all the IP addresses:


Machine No.	Floor	IP Address
	G/F	192.168.223.36
	1/F	192.168.223.53

# Wi-Fi Printing


For IOS (9.0 or above)

富士施樂『八達通』自助影印服務使用指示  
FUJI XEROX Octopus Self Copy Service Operation


## 4. Print Setting

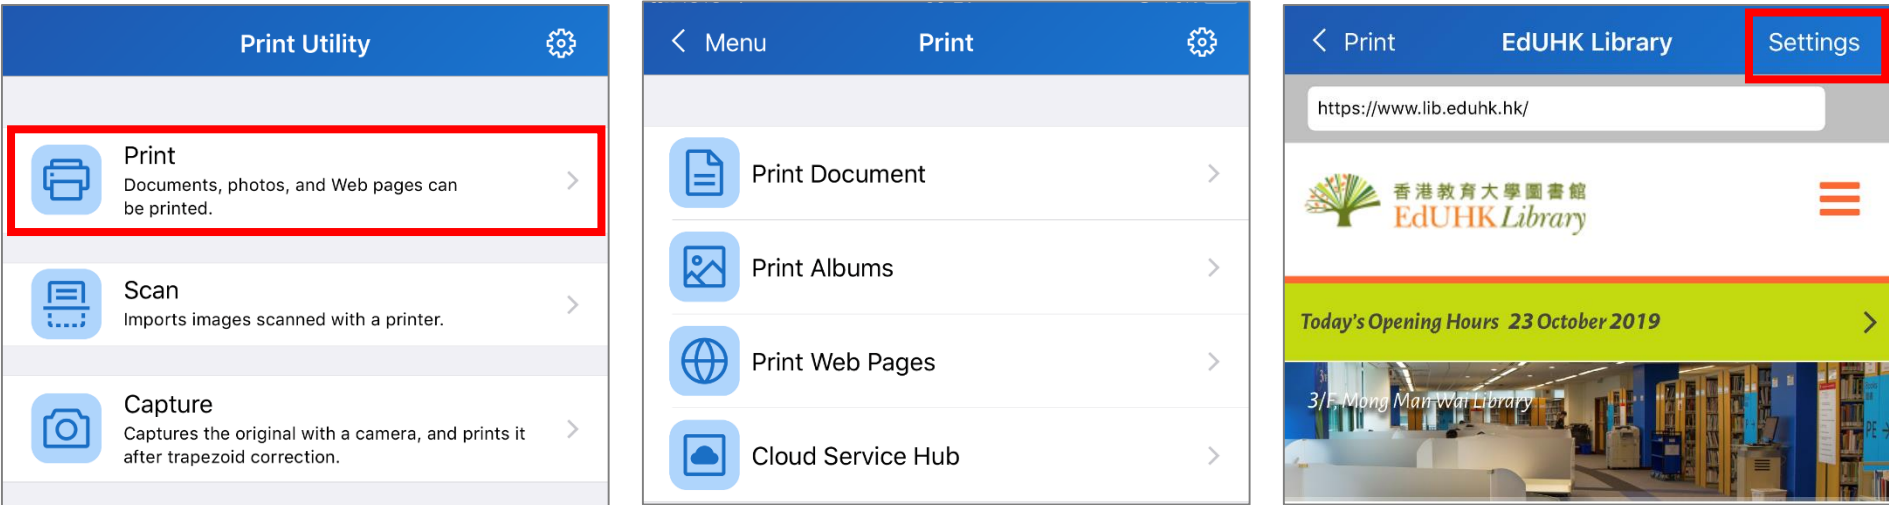

I. Tap [Print] in the Main Menu      II. Tap desired file to print      III. Tap [Settings] at the top menu

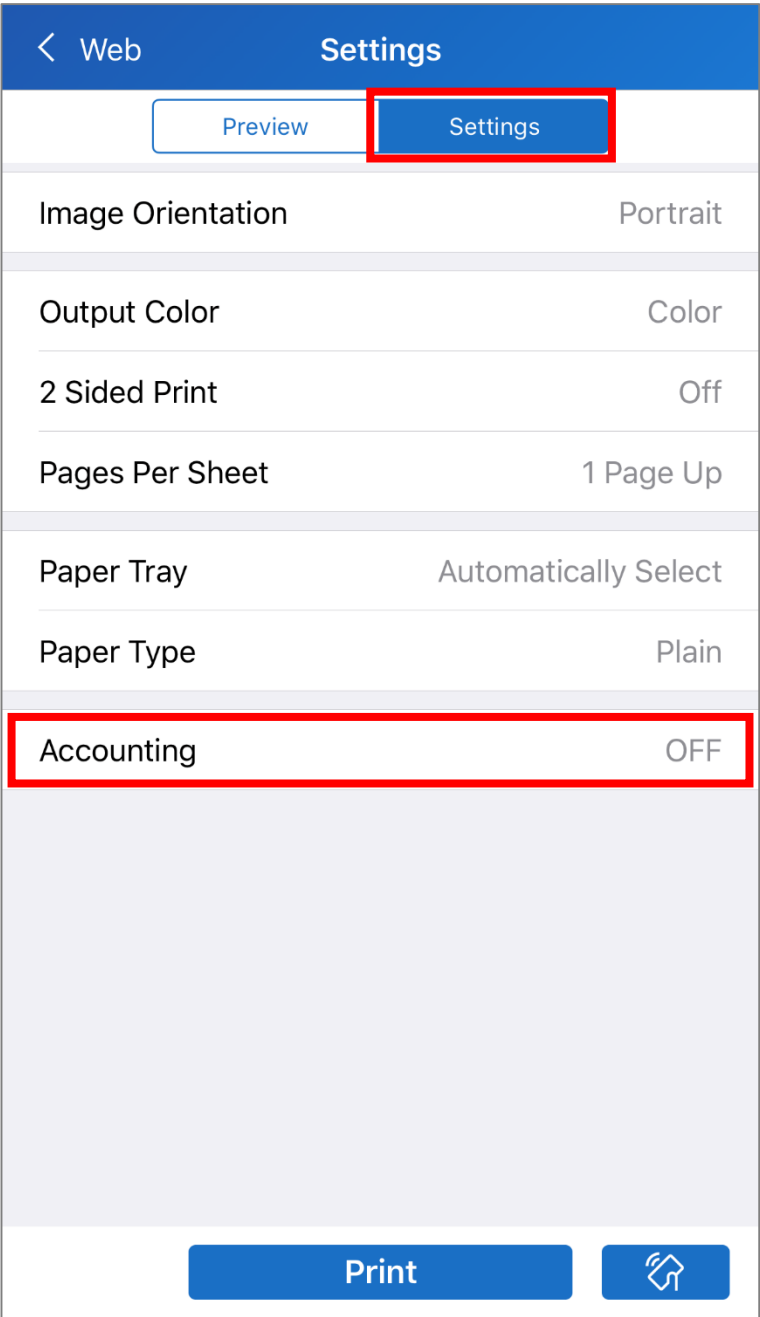

IV. Tap [Accounting]

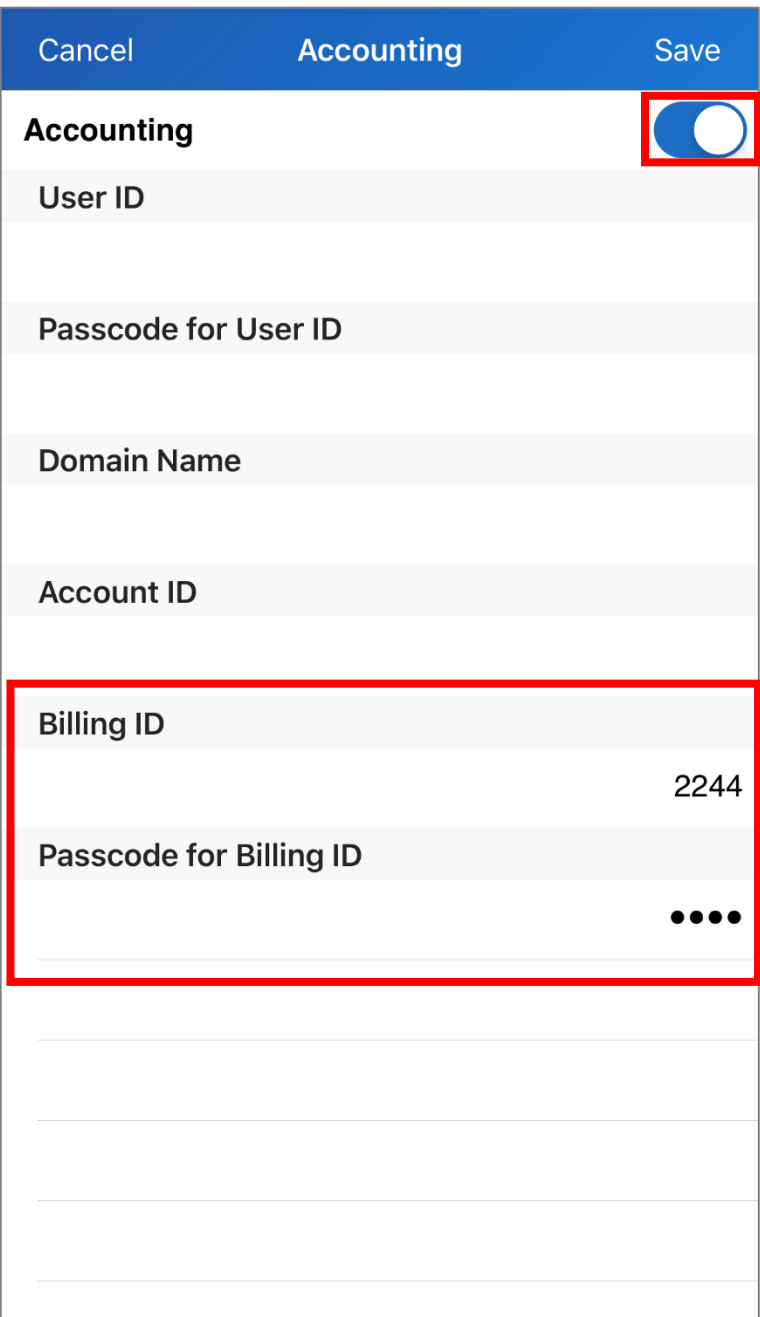


V. Set the Billing ID and Passcode

# Wi-Fi Printing


For IOS (9.0 or above)

富士施樂『八達通』自助影印服務使用指示  
FUJI XEROX Octopus Self Copy Service Operation


## 4. Insert Octopus Card

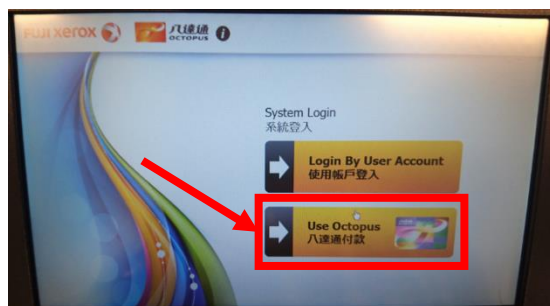

I. Select [Use Octopus] on Octopus Processor

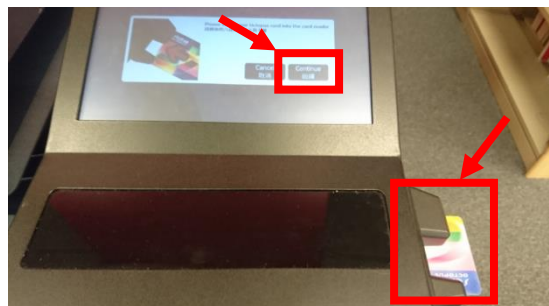


II. Insert Octopus card and click [Confirm] on Octopus Processor

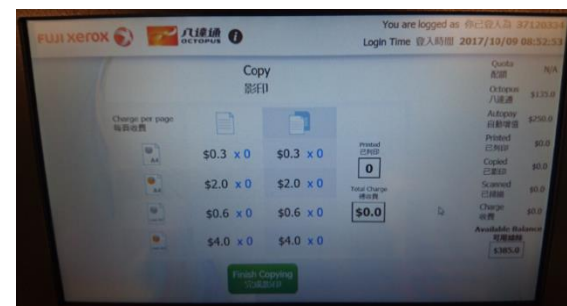


III. Octopus Processor will show the usable value


## 5. On Printer

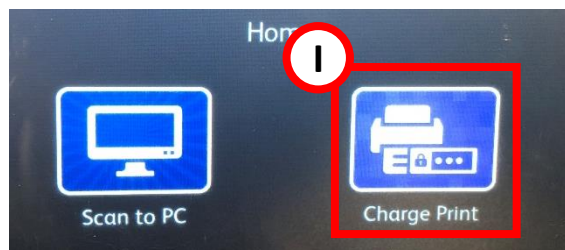


I. Tap [Charge Print] on the Menu of the Printer

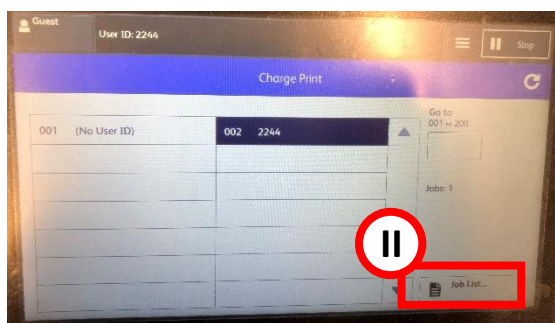


II. Select the Billing ID entered before and tap [Job List]

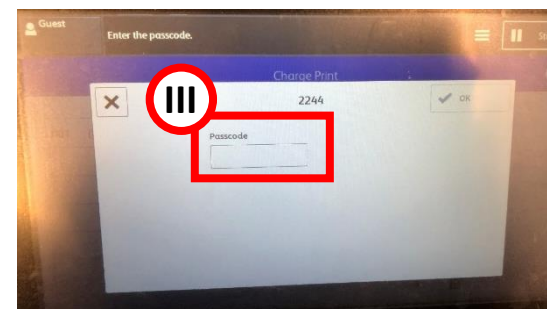

III. Input [Passcode]

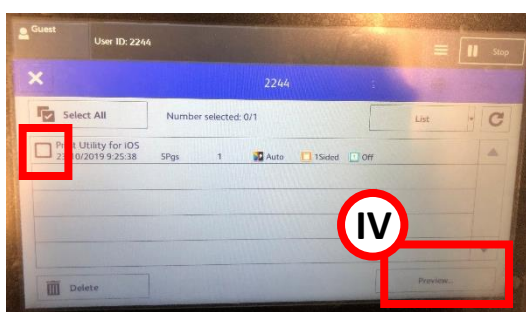


IV. Select your print job and tap [Preview]

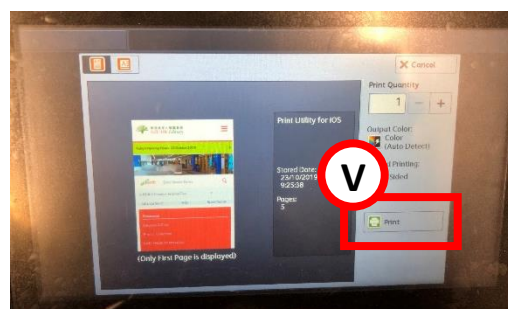


V. Tap [Print] to start printing

## 6. Remove Octopus card

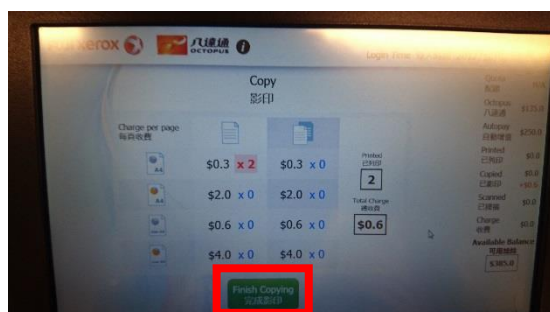

I. Select [Finish Copying] on Octopus Processor

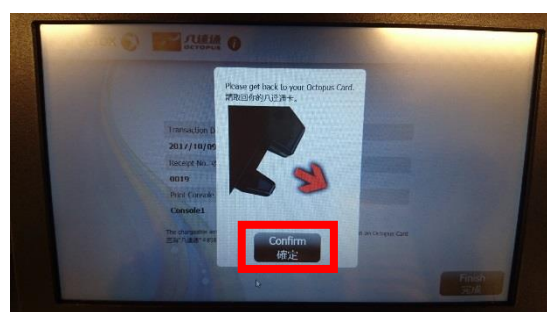

II. Select [Confirm] on Octopus Processor



III. Remove Octopus card